

ASSISTANT.®

TABLET PC

MODEL AP-801



ADDITIONAL FOR THE MANUAL

CONTENTS

CHAPTER 1. BASICS	5
PARTS AND CONTROL.....	5
PACKET CONTENTS.....	6
POWER ON AND OFF THE TABLET PC.....	6
STANDBY / SLEEP MODE.....	7
CHARGING THE TABLET PC.....	7
CONNECTING TO COMPUTER AND TRANSFERRING DATA	8
MEMORY CARD	9
HOME SCREEN	10
NETWORK CONNECTION.....	11
SCREEN ORIENTATION	13
CHAPTER 2. GETTING STARTED	13
WEB BROWSER	13
INSTALLATION AND MANAGEMENT GOOGLE MARKET APPLICATIONS.....	16
PLAYING MUSIC.....	18
WATCHING VIDEOS.....	20
VIEWING IMAGES.....	22
CAMERA	23
E-BOOK READING	24
E-MAIL.....	25
FILE EXPLORER	26
CLOCKS	27
CALCULATOR	28
SOUND RECORDER	28
CHAPTER 3: SETTINGS	29
WIRELESS & NETWORKS	29
SOUND SETTINGS.....	30
DISPLAY SETTINGS.....	30

HDMI CONECTION.....	31
LOCATION & SECURITY	31
APPLICATION SETTINGS.....	31
ACCOUNTS AND SYNCHRONIZATION	32
PRIVACY SETTINGS	32
STORAGE SETTINGS.....	32
LANGUAGE & KEYBOARD	33
VOICE INPUT & OUTPUT	34
ACCESSIBILITY.....	34
DATE & TIME	34
ABOUT DEVICE	35
CHAPTER 4. TROUBLESHOOTING	35
CHAPTER 5. ADDITIONS.....	36
MAINTENANCE.....	36
PRODUCT SPECIFICATIONS.....	37
CERTIFICATION INFORMATION.....	38
COPYRIGHTS AND TRADEMARK NOTE	38
DISPOSAL AND RECYCLING INFORMATION	39
EXPLANATORY AMENDMENT	39

SAFETY PRECAUTIONS

BATTERY

- Charge the battery only in temperature that ranges from 0 °C to 35 °C.
- Do not charge Tablet PC if the battery is found damaged or leaking.

ON OPERATION

- Never subject Tablet PC to extremes of light, temperature, moisture or vibration.
- Do not use or store Tablet PC in a location subject:
 - 1) Extreme high temperature, such as in a sun-heated car
 - 2) Direct sunlight
 - 3) High humidity or places with corrosive substances
 - 4) Sub-zero condition, especially during winter
- Do not use the tablet while driving or walking
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- Do not drop or hit it to hard surface, or the screen may get damaged.
- While using the earphone, if the volume is excessively high it may cause hearing damage. So please adjust the volume of the player to a moderate level and balance the time of using.


MICRO SD CARD AND CONNECTING TO THE PC

- After inserted a Micro SD card, if the device has no response, please take out and insert again.
- Do not remove Micro SD card or turn off Tablet PC during data writing or reading to prevent damage to data and to the device.
- Make sure the Micro SD card is unlocked before writing or deleting data in the card.
- Backup your files and data before formatting the Micro SD card. Please format the Micro SD card in FAT.
- Do not upgrade the firmware by yourself. This would cause damage to your tablet

CHAPTER 1. BASICS

ASSISTANT AP-801 – is a Tablet PC with touch LCD. It supports Wi-Fi function and third party software.

 PARTS AND CONTROL

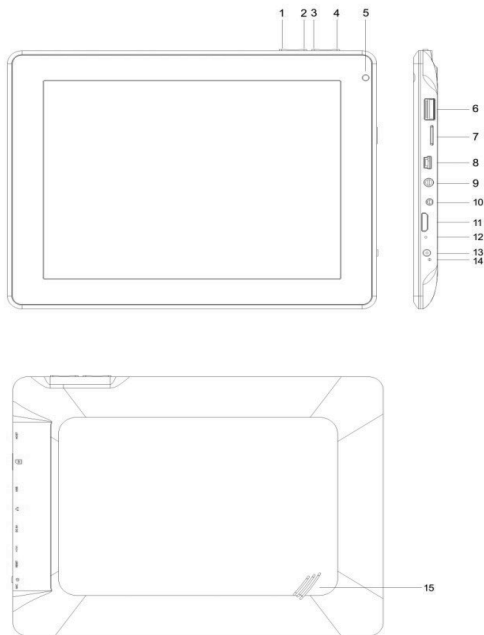

1. Volume–button – press to decrease volume
2. Volume + button – press to increase volume
3. Menu button – press to display option menu
4. Return button – press once to return to previous screen, long press to return to home screen
5. Front camera

ENG

6. USB- host: support USB mouse, USB keyboard, 3G USB dangle, Ethernet adapter, USB flash disk / flash drive
7. DC-in jack
8. Mini—USB port: connect to computer
9. Earphone jack
10. DC in: connect to 5V adaptor
11. HDMI Output
12. Reset button
13. Power button – press and hold for 3 seconds to turn on device
14. Microphone
15. Speaker

PACKET CONTENTS


- 1x Tablet PC.
- 1x Power cable
- Stereo speakers
- 1x USB cable
- 1x Instruction Manual
- Cover

POWER ON AND OFF THE TABLET PC

Turn on

To start your tablet, press and hold the [Power] key at the right side of your tablet for a while. You will be guided to your Home screen. Drag the slider to unlock the tablet.



Press and drag the slider  up to unlock unit.

ENG

Turn off

When the tablet is on, to shut off your tablet, press and hold the [Power] key until the **Device options dialog appears** and tap **Power Off**, then **Your device will shut down dialog appears**. Tap OK

STANDBY / SLEEP MODE

Press **[Power]** button to enter standby mode, then the device locks automatically. Locking the device turns off the display to save your battery and to prevent unintended operation of the device.

To wake up the device, press **[Power]** button again, then press the Lock button and drag the slider.

CHARGING THE TABLET PC

- You need to charge the device prior to use it for the first time or when battery power is low.
- Charge the device using AC adapter with output 12V, 2.0A
- Please turn the device to standby mode to shorten the charging process
- Using device for the first three times, charge it for at least 12 hours when the power runs out completely.
- Generally, it will take about 5 hours to fully charge the device in standby mode (display off).
- When power cable is connected to the device for charging, the device will enter into standby mode after remains idle for 60s. Press the button **[Power]** to wake up the device.
- The battery status is displayed at the top of the screen.




Very Low Battery

 


Full Battery




Charging Battery

Sign  indicates that the power of battery is full. When the battery level becomes too low, a prompt comes up to note you to charge your tablet.

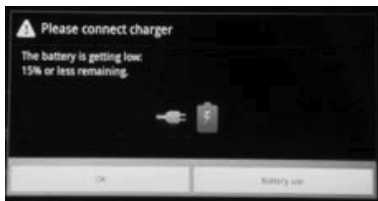

ENG

 The charge status can be found on the upper lefthand corner, as shown below.

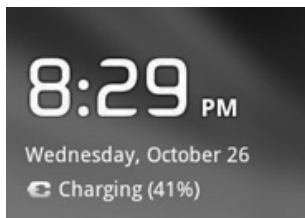

Заряд батареи (41%)

The tablet may take 4-5 hours to charge to full.

Note: Sometimes 100% charging may not show up, even the tablet has been charged for a very long time (more than 5 hours). The battery is actually full, but the charging info is delayed. In this case, you may unplug the power cable.

Tips on extending battery life:

1. New battery will be its best condition after 2-3 full charging and discharging
2. Streaming audio or video apps will use a lot of battery life.
3. Disable wireless network positioning. You can turn it off from **Settings → Location & Security → Use wireless networks**.
4. Switch off Wi-Fi if you're not close to a strong Wi-Fi signal for extended periods of time. This puts strain on the tablet.
5. Use a quick screen timeout. You can alter this option from **Settings → Display → Screen timeout**
6. Reduce brightness to a comfortable level using **Settings → Display → Brightness**.
7. Widgets that access the Web consume more power than widgets that do not.


Note:

 
1. Do not use other adaptors to charge your tablet which can cause damage to the battery.
2. The tablet can not be charged via USB cable when it is connected to your PC.

ENG

CONNECTING TO COMPUTER AND TRANSFERRING DATA

Connect to PC via USB cable

When unit is connected to PC with a USB cable, the icon  appears at the middle of the status bar. **Tap it and select USB connected, then Turn on USB storage dialog appears. Tap OK.**

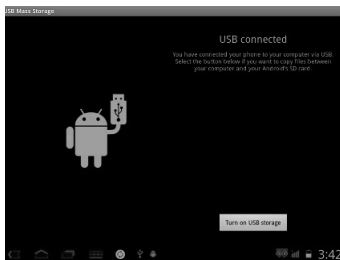

To remove the tablet safely, tap Turn off USB storage.

Transferring contents from computer:

 
- To import contents (ebooks, video, audio, photo etc) into device, connect it to PC via the supplied USB cable.
- Upon successful connection to PC, turn to the device, touch and hold the USB connection icon on status bar, drag downwards to display an ongoing list.
- Select “USB connected”, then tap on “Turn on USB storage” to enter USB mode and all operation will be halted.
- Go to [My Computer], double click on the device’s disk to open.
- Perform normal file management operation like other USB device.

MEMORY CARD

This unit supports Micro SD card up to 16 GB.

To insert a memory card:

Insert the card correctly with the contact pin facing downwards as illustrated below. Pushing the card in, you should hear a click when the card is seated correctly. You may damage the card and the device if Micro SD card is not inserted correctly. To remove Micro SD card, push the card once again until it clicks.

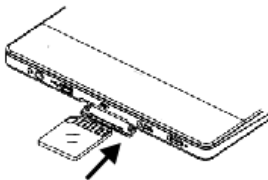

- When a Micro SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content. Please avoid inserting or ejecting Micro SD card when other operation is running as this may cause the system hang.

ENG

- Do not remove the card if the content inside the card is being played. This will halt the operation of the device and cause the device to restart.
- If the system is not responding press the button [Reset] to reset.

HOME SCREEN

When the device is turned on, it will enter into the home screen.



You can fill the space with any combination of shortcuts, widgets, and folders you like. Some pre-installed shortcut icons will appear at the bottom, and a **Google Search** widget appears at the top. When you power on your tablet for the first time, you'll see the main home-screen panel. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right. At the top of the home screen is your Status Bar:

- A. Home button
- B. USB connection
- C. USB debugging
- D. Time display
- E. Wi-Fi connection
- F. Battery indicator
- G. Volume – button
- H. Volume + button


ENG

- I. Return button
- J. Menu button
- K. Search bar for web browser
- L. Navigation bar
- M. Widget & Shortcut button
- N. Indication for additional home screens

Adding icons on homescreen

Touch and hold any icon for about 2 seconds, the icon will be in the movable status, you could drag the icon to any panels which exist at the screen.

Removing icons on home screen.


On the main screen, touch and hold undesired icon till it becomes movable. There will be a trash  can at the top screen, drag the item to the trash can , and release it when it turns red.

Addition widgets to your homescreen

To add a widget, tap and hold your finger on any open space on your home screen, and select **Widgets** from the context menu that opens. From there, select any of the available widgets. For instance, you may add an Analog clock, calendar, picture frame, and other useful widgets to your Home Screen.

How to set wallpaper

1. To add wallpapers, tap and hold your finger on any open space on your home screen, and select **Wallpapers** from the context menu that opens. In the popup Select wallpaper from dialog, select a wall paper from **Gallery**, **Live wallpapers** and **Wallpapers**.

2. On the homescreen in the upper right corner tap the tool bar  and select **Wallpapers** in appeared window.


How to hide status bar

On the home screen, you may hide your status bar or make it reappear by swiping your finger up or down.

NETWORK CONNECTION

Turn on Wi-Fi network

Within the Apps Panel, tap **Settings** → **'Wireless & networks** → **Wi-Fi** to turn on and scan. Your device lists the networks it finds within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap Connect. When your device is connected

to the network, the wireless indicator  appears in the status bar. If necessary, enter a password and tap **Connect** to save the settings for the encrypted connection and connect to Wi-Fi (networks that require a password appear with a lock icon)

Turn off Wi-Fi network


To turn off Wi-Fi, uncheck **Wi-Fi** under **Wireless & networks**. Turn off Wi-Fi when you're not using it to extend the life of your battery between charges.

Add a Wi-Fi network

Users may also add a **Wi-Fi network** under **Wi-Fi settings**. In **Wi-Fi Settings**, tap Add Wi-Fi network. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

Forget a Wi-Fi network

In the **Wi-Fi settings** screen, touch the name of the network. Touch **Forget** in the dialog that opens.

Note: Network status icons  turn green if you have a Google account added to your tablet and the tablet is connected to Google services, for syncing your Gmail, Calendar events, contacts, for backing up your settings, and so on.

Network notification

You can activate a notification of available networks: **Wi-Fi settings** → **Network notification**

VPN Connection

Tablet allows creating a virtual network VPN. To create it run menu **Settings** → **VPN Settings** → **Add a VPN**. Choose a type of VPN-connection in opened window.

Mobile networks

To connect a mobile network tap **Settings** → **Wireless & networks** → **Mobile networks**. Select options for roaming networks, network selection, operator selection, and access point names.

To allow/deny data transferring via mobile network tick in front of item **Mobile networks** → **Data enabled**

ENG

Uncheck to prevent your tablet from transmitting data on any mobile network. This is useful if you are traveling in an area where you do not have a mobile data plan and want to avoid charges for data use on local carriers' mobile networks.

Internet-roaming allows transferring data in roaming: **Mobile networks** → **Data roaming** → **OK**.

Connection to Ethernet-network

For connecting with Ethernet-network choose **Settings → Wireless & networks → Ethernet Settings**. At the new window you can set next options:

- **Ethernet: turn on wired Ethernet network**
- **Linkage status**
- **MAC address**
- **Static IP settings: IP address, Netmask, DNS1, DNS2.**

SCREEN ORIENTATION

Screen orientation can be set to vertical or horizontal via the built-in G sensor.



From main menu, tap **Settings → Display → Auto-rotate screen**. Rotate the unit and the screen rotates too, automatically adjusting to fit the screen.

CHAPTER 2 GETTING STARTED

WEB BROWSER


Using an Internet Browsing

Before using your browser, make sure Wi-Fi or internet is connected.

On the main screen, tap the Google text field  or the **icon Browser**  icon to open your browser.

In the address bar, tap the text field to make the Android keyboard appear for entry of keywords or URL.

Tap and hold the text field to edit text or change input method. To get a required keyboard that perfectly suits your needs, you may download and install a *.apk file of such keyboard on your tablet (standard and Android keyboards are used by default).

Tap on icon , to display the browser option menu.



ENG

Option menu:



– Open a new window at browser start page



– Bookmarks: open a list of bookmarks, favorite sites and apps



– Windows managing: switching between windows, adding a new one, etc.



– Tap the **Refresh** to refresh on the current page, tap **Stop** to stop loading the current page



 
– Go to the previous visited web-sites



– More available functions.

Bookmarks

To alter bookmarks options tap an option menu at the current web-site. In the window that opens choose required tab:

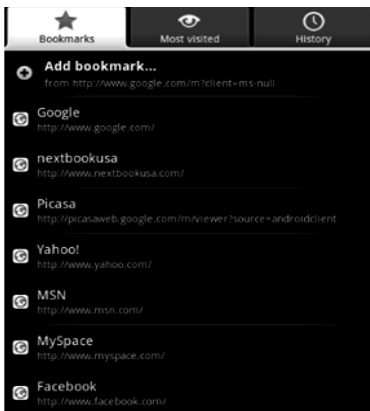

ENG

- **Bookmarks:** list of current bookmarks and addition of new one.
- **Tap Add a Bookmark to create a new bookmark:** write name of bookmark and URL-address at the new window.
- **Most Visited:** tap to display the most visited web-site list
- **History:** access to view history lists. To remove these lists Clear history

Additional functions

- **Add a Bookmark:** write name of bookmark and URL-address at the new window
- **Find on page: searching text at the current web-site**
- **Select text: switching into a text-copy mode.** Move the roll ball write / left on display to mark text. Tap on it to copy text into a clipboard
- **Page info:** shows URL-address of the current web-site
- **Share page:** send an URL –address by e-mail
- **Downloads:** list of downloaded files and applications
- **Settings:** this menu access to allow/deny options of web-site displaying, change settings of confidentiality and security.

Page content settings:

- **Text size**
- **Default zoom**
- **Open pages in overview:** activate to show overview of nearly opened pages
- **Text encoding**
- **Block pop-up windows**
- **Load image:** display or not images on web-pages
- **Landscape-only display:** displays pages only in the wider, landscape screen orientation
- **Enable JavaScript**
- **Enable plug-ins**
- **Open in background**
- **Set home page:** editing URL-address of the home page

Privacy settings:

- **Clear cache:** clear locally cached content and databases
- **Clear history:** clear the browser navigation history
- **Accept cookies**
- **Clear all cookie data**
- **Remember form data:** remember data you type in form for later use
- **Clear form data**
- **Enable location:** allow sites to request access to your location
- **Clear location access**

Security settings:

- **Remember passwords**
- **Clear passwords**
- **Show security warnings:** show warnings if there is a problem with a site security



Advanced settings:

- **Set search engine:** set and installation search-system by default
- **Reset to default**


Android 2.3 OS also supports Adobe flash 10.1 and 10.2. That means you are able to view on-line flash videos.

INSTALLATION AND MANAGEMENT GOOGLE MARKET APPLICATIONS

Installation Google market apps


The tablet ASSISTANT AP-801 is preloaded with Andriod Market , you can search and install apps here after login with your Google account. To install and manage applications tap an **ApkInstaller**  → **Install** which is located on application menu by default. To install an application, follow below steps:

 1. Copy the *.apk file to your tablet via USB-cable from your PC.
2. Tap to open the **APKInstaller** → **Install** → **Internal Memory or SD Card**. Available *.apk files in SD card or internal memory then appear at the right side. Touch the required one to install it. In case a *.apk is already installed, a **Replace application** dialog will appear. You can also download *.apk files from third part software.

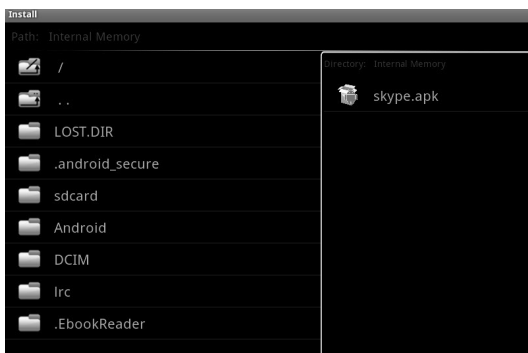


Note: Make sure the *.apk file is workable on Android 2.3 and the suffix is *.apk. e.g. "skype.apk".

 An **Install blocked** dialog appears as below after your first attempt to install an *.apk file:

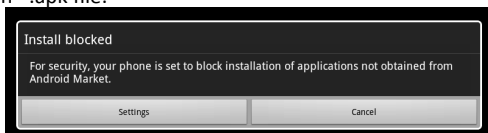

 In this case tap **Settings** → **Unknown sources** → **OK** → **Install once again**.

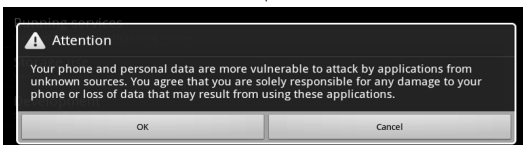


In some cases, there may be no icon on in the App panel after a *.apk file is installed. Possible reasons may be that this app is not compatible with your OS or the downloaded *.apk file is a broken one so you may need to download a full version.

Management of Google Market applications

 Manage an application in the **ApkInstaller**  → **Manage**




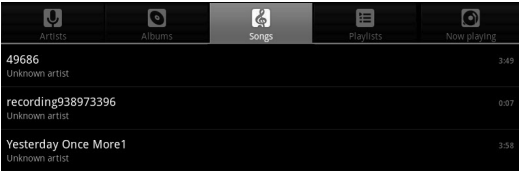 
Tap on selected application at appeared window. Select an appropriate action **Launch, Export, Uninstall**.

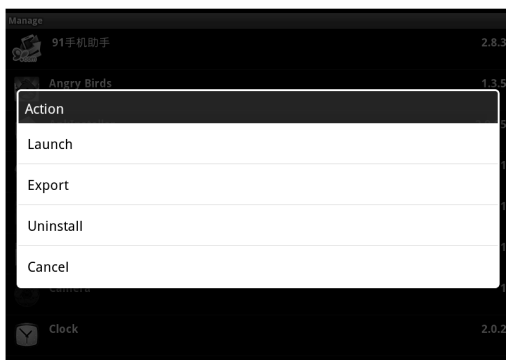

ENG PLAYING MUSIC

Music library

After loading your music onto tablet PC, tap the music icon  (found by default on home screen or by opening the App panel). You'll be given the option of selecting by **Artist, Song, Album** or custom **Playlist**.










Tablet ASSISTANT AP-801 supplies next audio-formats: MP3, WMA, WAV, APE, FLAC, AAC, OGG.

Playing music


- 1. Select menu **Music** from main menu to enter a music library
- 2. Tap on a desired tab to enter song list
- 3. Drag up and down to scroll the song list
- 4. Tap the desired songs to start playing



Controlling Song Playback

Pause or play songs	 or 
Play previous or next song	 or 
Skip to any point in a song	Tap anywhere or drag the playhead on the progress bar
Display the current song list	
Set shuffle mode	
Set repeat mode	

 Sound effects


On music playback interface, tap **Sound Effects** . You can choose appropriate mode of playback: **Standard, Classic, Jazz, Pop, Rock, etc.**

Customizing sound effects


Tap on icon **Sound Effects**  → **User settings**. You can increase or decrease the frequency setting in this menu.

Use the playlist to manage the songs in the library.

Creating a new playlist

In the music playback screen tap **Add to Playlist**  → **New** and enter the name for the new playlist, then tap **Save**.

Adding the current song into playlist

 
In the music playback screen, tap **Add to Playlist** . Tap on a desired playlist, then the current song has been added into the selected playlist.

WATCHING VIDEOS

Playing videos

You may play video stored in tablet PC memory or CD-card. ASSISTANT AP-801 supports next video-formats: AVI, WMV, MP4, MKV, RM, RMVB, FLV, MOV, 3GP up to 1080P, etc.



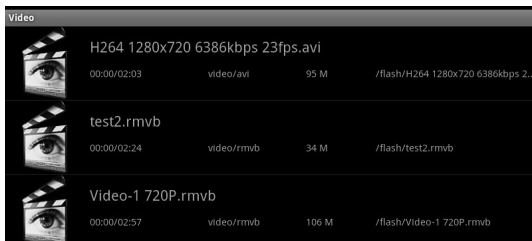










1. On the Main menu, tap **Video** to open video player
2. Drag up and down to scroll through the file list.
3. Tap on the video icon to start it (it'll begin automatically). You can manage video playback by tool bar, which is at the bottom of display.
4. Touch and hold on the selected video file to delete it



Controlling video playback

When the video is playing tap on the screen to pop up control toolbar.



Play or pause a video	 or 
Play previous / next video	 or 
Fast rewind or fast forward	 or 
Skip to any point in a video	Tap anywhere or drag the playhead on the progress bar
Adjust the volume level	 или 
Add a bookmark in the current playback position	
Adjust screen brightness	
Adjust the screen size: full screen, 16:9, 4:3	
Display video menu	
Return to the video browser screen	

Note: Adding a bookmark allows you to continue playing from the bookmark when you open the video file next time.

With the Wi-Fi on, you are also able to view an on-line flash video as the tablet supports both Adobe flash 10.1 and 10.2.

Connection to the TV via HDMI-Output and viewing video

To connect your tablet to TV follow below steps:

1. Tap on **Video player** icon or other video players to play a required movie.
2. Adjust your TV set and select **HDMI- output**
3. Connect the device to TV via HDMI cable, then enter **HDMI setting** → **Turn on HDMI** → **OK** turn on HDMI, and wait for a few seconds for your TV set to receive signal.

ENG

Note: When HDMI output function is used, the screen of the MID goes dark.

Touch any point of the dark screen, on your TV screen will appear **Vol+ / Vol- Play/Pause**, etc.

To have required volume, proportion, brightness, etc., you may adjust before connecting tablet to TV.

VIEWING IMAGES

You can view, show off, and even edit your digital pictures on the tablet's full color, high resolution display. After loading your media, tap **Gallery**



on your home screen or within the app panel.

 
Thumbnail View


- All photos available in the internal memory and Micro SD card will be listed in thumbnail view
- Tap on the desired photo to full screen view.
- In full screen mode press **Back** to return to thumbnail view mode
- Flick left and right on the screen to view previous / next image

Start to view images

Tap on the screen to show / hide the control bar.

Tap or to zoom  in/out .

Tap **Slideshow**  to start slide show, tap on screen to stop the slide show.

Tap  **Menu** to use the option menu.

Note:

- In zoom in /out mode, drag up, down, left or right to move image
- Rotate the unit to switch screen orientation

Using the option menu

 
 
To share the photos with your friend via email etc., tap **Menu → Share and choose the appropriate program**: Picasa, Gmail, Bluetooth.






Deleting images

ENG To delete the current image tap **Menu → Delete**

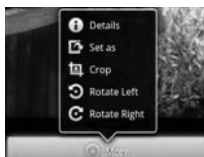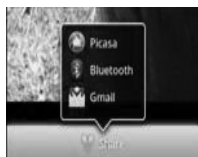
Additional functions


To use additional functions tap **Menu → More**



View photo details	Details 
Set the photo as wallpaper	Set as 
Crop the photo	Crop 
Rotate the photo by 90 degrees clockwise Rotate	Rotate Left 
Rotate the photo by 90 degrees counter-clockwise	Rotate Right 

CAMERA

 The ASSISTANT AP-801 is provided with built-in front 0.3 MPics camera. Tap the icon  in the app panel to open it.

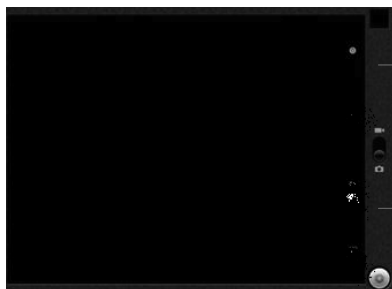


Режим изображения, размер, качество и т.д.

Запись местоположения


Photography mode



To enable camera mode hold and move the roll ball to the **Camera** icon. Tap  the tab on the lower right hand corner each time for taking a photo. You can set below parameters of photography:

ENG

- **Picture quality:** Super Fine / Fine / Normal
- **Colour effect:** None / Mono / Sepia / Negative / Posterize / Aqua
- **Restore defaults.**

You may view the photos you have taken by tapping the  tab on the upper right hand corner. Or you may go back to **Gallery**.

Tap **ESC** to exit photography mode.

Video-recording mode



To activate recording mode hold and move to the roll ball the recording icon to record Video . Tap on the lower right hand corner to start recording and tap it again to stop. Recorded videos can be viewed in Video player.

You can alter options of video recording:


- **Video quality:** High, Low, MMC, Youtube
- **Colour effect:** None / Mono / Sepia / Negative / Posterize / Aqua
- **Restore default**

 
Press **ESC** to exit video-recording mode.

E-BOOK READING


The tablet supports many eBook formats like PDF, PDB, E-Pub, FB2, etc. Also, you can download available e-Books with Wi-Fi or network.


Turning on reading mode

Tap the **Shelves**  icon within the app panel to open it or at the home screen (by default).

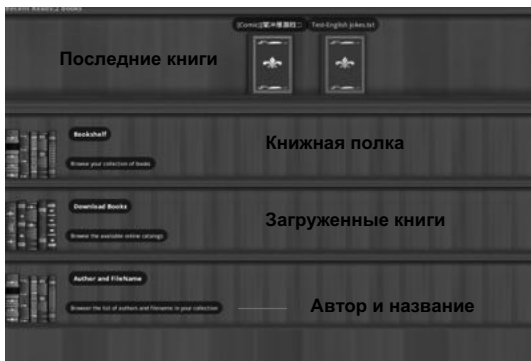






Bookshelf

Here you can read e-book stored in micro SD card or internal flash. Touch an e-Book on the shelf to read it .

In reading, touch the tab to get a tool bar .

Tool bar

Changing front size	 Font Size
Do to required page number	 Go To
Bookmarks managing: Show Bookmarks, Add Bookmarks, Delete Bookmarks	 Bookmarks
Information about current book	 BookInfo
Autoflip settings	 Auto Flip

E-MAIL

Setting up E-mail Accounts

Prior to the use of e-mail, you need to set up the mailbox account.



1. Choose the **E-mail** from the mail menu or from application panel.
2. In opened window enter your email address and password, tap **Next** to continue.
3. Set P03/IMAP server (if necessary, obtain the required information from your network administrator, then tap **Next** to check server setting.
4. If you have set successfully, enter your name to be displayed, then tap **End** to start to use the mail.

Using the mailbox


- Open an e-mail box and drag up and down to scroll the mail list
- Tap to open the mail you want to read
- On the mail list touch and hold on the mail to display option menu.
- Use the menu to open mail, reply, forward, delete and so on.

E-mail menu

In the mail list tap the option menu  to open a mail menu:

- Refresh: refresh mail
- Write: write a new mail
- Account: view all e-mail accounts
- Setting: set email account

Deleting an e-mail account

1. In the email list tap an option menu icon  to display the mail menu.
2. Select **Account** to display e-mail account.
3. Touch and hold the desired account to pop up an option menu, and then tap **Delete account**.

Note: You can set multiple mail accounts, each time you use mail, the system will automatically jump to the default account.

FILE EXPLORER

To work with content stored on your device files use explorer.



To run a file explorer tap **Explorer** at the main menu or application panel. Select menu **Internal Memory/ Micro SD/ USB** to view the contents.

- Drag up and down to scroll through the file list to select the desired folder or file.
- Touch and hold the selected file or folder to show the edit menu. You also can tap **Edit** at the option menu.
- Tap on file or folder to open it

Tool bar



- Home:** return to the home Explorer screen.
- Level Up:** return to the previous directory
- Multi:** choose more than one item.
- Editor:** copy, delete, move or rename a file or folder.
- Back:** go to previous screen.
- Next:** go to next screen.

Edit menu

Touch and hold on the selected file or folder or tap **Editor** at the option menu to show the edit menu.

Selecting multiple files or folders:

You can select multiple files or folders at the same time.

1. Select **Multi** on the tool bar.
2. Mark desired files and folders (they'll be marked in red). To cancel selected items, tap on them again.

Copying / moving files or folders

1. Select the desired files/folders to be copied or moved from the file list.
2. Select item **Editor** to show the edit menu, then tap Copy or Move.
3. Go to the target folder that you want to put the selected file
4. Tap item **Edit → Insert**.

Note: it may take longer time to paste files/folder with big file size.

Renaming the file or folder

1. Select the desired file/folder to be renamed.
2. Touch and hold the desired file or folder to show the edit menu, then select **Rename**
3. Tap the file name field and use Onscreen keyboard to enter a new file name.
4. Tap OK to confirm.

Deletion files or folders

1. Select the desired files/folders to be deleted.
2. Tap **Edit** to show the edit menu.
3. Select **Delete** to display a message window
4. Select **Delete** to confirm the

Note: if you want only to copy/move/delete one file/folder, you can touch and hold the desired file or folder, then follow the above steps to do.

CLOCKS

Run an application Clock on the application panel. It will automatically switch in a table clock mode.


Set an alarm

1. On alarm setting screen, tap **Add Alarm** and do necessary settings.

Note: You can set multiple alarms.

2. Adjust any of the following settings:

- To set the alarm time, tap **+ or –** button to adjust the desired hours and minutes, then tap **Set** to confirm.
- To set the alarm to repeat on certain days, tap **Repeat** and choose the days.
- Tap **Ringtone** to choose the ringtone that sounds when the alarm is activated
- To give the alarm a description, tap item Label. It displays the label when the alarm sounds.

If at least one alarm is set and turned on, the alarm icon appears in the status bar at the top of the screen .

Turn an alarm on or off: tap on an alarm and turn any alarm on or off.

Alarm settings: tap on the desired alarm to alter it settings.

CALCULATOR

Tap on the item Calculator at the application panel.

The available options of are :

- Clear history
- Advanced panel: shows additional mathematical functions.

SOUND RECORDER






Tap **Sound Recorder** on the application menu to enter sound recording mode.



ENG

Recording a voice file


- Press  to start recording a voice file


- Press  to stop recording
- Press  to play back the current recorded voice file.
- It will display a message window to choose **Use the recording or Discard**, choose **Use the recording** to save the voice file; choose **Discard** to discard the voice file.
- A recording time indicator will appear during the recording.

Play back the voice file

- The record is saved in record folder, open **File Explorer** → **Record** folder, tap on the desired recorded file to be played.

 CHAPTER 3: SETTINGS

 
Within the app panel tap the **Settings** icon ( or found by default on your home screen), then select items to configure.

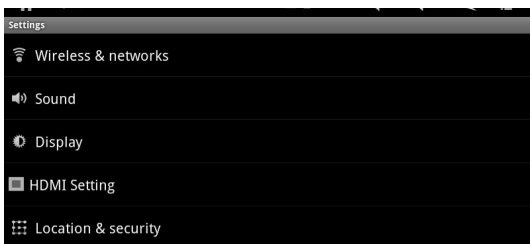

WIRELESS & NETWORKS

The Wi-Fi settings allows you manage networks, such as turn Wi-Fi on and join Wi-Fi networks. There are such available options in this menu:

- **Wi-Fi**: searching and connecting to available Wi-Fi-networks.

Tablet will show list of the detected networks, select a required one. When the unit is connected to the Wi-Fi-network the indicator appears at the status bar .

If necessary, enter a password and tap **Connect** to save the settings for the encrypted connection and connect to Wi-Fi (networks that require a password appear with a lock icon).

ENG

Once you've joined a Wi-Fi network manually, it automatically connects to it whenever the network is in range.

- **Wi-Fi Settings:** list of available networks, information, addition of new network Add a Wi-Fi
- **VPN Settings → Add a VPN:** creation and adjustment of the new VPN-network
- **Mobile networks:** setting of required parameters (access point names, operator selection and so on). To allow/deny data transferring via mobile network tick in front of item Mobile networks → Data enabled
- Uncheck to prevent your tablet from transmitting data on any mobile network. This is useful if you are traveling in an area where you do not have a mobile data plan and want to avoid charges for data use on local carriers' mobile networks.
- **Ethernet Settings.** These options are available:
 - **Ethernet** – turn on wired Ethernet network
 - **Linkage status**
 - **MAC address**
 - **Static IP settings:** IP address, Netmask, DNS1, DNS2.

SOUND SETTINGS

To adjust sound settings tap **Settings → Sound**.

You can change such sound settings as:

- **Silent mode** – silence all sounds except media & alarms
- **Volume** – setting of media & alarms volume
- **Notification ringtone**
- **Audible touch tones**
- **Audible selection**
- **Screen lock sounds**

DISPLAY SETTINGS

Tap **Settings → Display** for changing display settings.

You can change such display settings as:

- **Brightness**
- **Accelerometer coordinate system** – selection of display orientation.
- **Animation** – smooth transitions between windows switching
- **Screen time-out** – adjust the delay before the display screen automatically turns off.

The display has a screen timeout by default set to 1 min. If the unit is left inactive for that period of time, the screen will go dark as if turned off. However, it is simply in standby mode. Quick press the [Power] button and a screen will appear with a green padlock button on the lower left hand corner.

HDMI CONECTION

This menu allows adjusting settings of the connection between unit and TV via HDMI: **Settings → HDMI Settings**:

- **Turn HDMI** – switch on to TV-connection mode
- **HDMI Resolution** – resolution settings
- **Screen Zoom** – increase / decrease the screen

LOCATION & SECURITY

To set up automatic location, add or remove tablet administrators and so on tap **Settings → Location** and security. Next options are available:

- **Use wireless networks**: location is determined by Wi-Fi and/or mobile networks
- **Set up screen lock**: lock screen with a pattern, PIN or password
- **Visible passwords**: show passwords as you type
- **Select device administrators**: addition and removing device administrators
- **Use secure credentials**: allow applications to access secure certificates and other credentials
- **Install from SD card**: install encrypted certificates from SD card
- Set password

APPLICATION SETTINGS

This menu allows managing, running and changing applications installed on the device including third source applications.

Tap **Settings → Applications** to make changes. The available options are:

- **Unknown sources**: select this item to allow installation of non-market applications
- **Manage applications**: deletion, copying, renaming of the installed applications
- **Running services**: view and control currently running services
- **Storage use**
- **Development**: set options for application development, namely:

- **USB Debugging:** debug mode when USB is connected
- **Stay awake:** screen will never sleep while charging
- **Allow mock locations**
- **Google Application:** show/hide Google applications

ACCOUNTS AND SYNCHRONIZATION

To adjust and synchronize data apps with internet tap **Settings → Accounts & sync**. The available options are:

- **Background Data:** application can synchronize, send and receive data at any time
- **Auto-sync:** application sync data automatically or timed

 
PRIVACY SETTINGS

To manage privacy settings run **Settings → Privacy**. The available options are:

- **Back up my data:** back up application data, Wi-Fi passwords and other setting to Google server
- **Automatic restore:** if you reinstall an application restore backed up setting or other data
- **Factory data reset**

STORAGE SETTINGS

To view your SD card, NAND flash, internal storage status tap **Settings → Storage**.

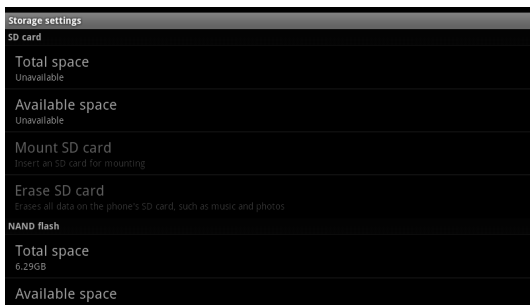

SD-card:

- **Total Space**
- **Available space**

- **Mount SD card**
- **Erase SD-card**

NAND flash:

- **Total Space**
- **Available space**
- **Erase NAND flash**

 
Internal storage:

- **Available space**

Note: As software takes up your tablet memory, the total memory is usually less than the actual flash memory.

LANGUAGE & KEYBOARD

This menu allows setting language, region and methods of text input.

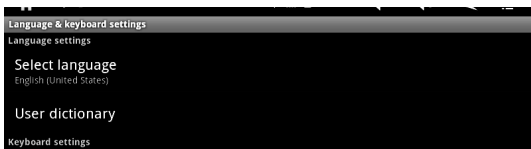

To change language and keyboard select menu **Settings → Language & keyboard settings**, following settings are available:

- **Select Language:** set the language of menu and keyboard up to 22 languages for your choice.
- **User dictionary:** addition new words to a dictionary
- **Android keyboard**

Keyboard settings:

- **Vibrate on keypress**
- **Sound on keypress**
- **Popup on keypress**
- **Touch to correct words:** touch entered words to correct them
- **Auto-capitalization**
- **Shoe settings key**
- **Voice input**
- **Input Languages**

Word suggestion settings:

- **Quick fixes** – corrects commonly used mistakes
- **Show suggestions** – display suggested words while typing
- **Auto-complete** – spacebar and punctuation automatically insert highlighted word

ENG

VOICE INPUT& OUTPUT

Some apps such as voice recorder, voice search and so on requires setting and changing parameters of input language, filters, etc.: **Settings → Voice input & output setting**. In this menu there are such available options:

- **Voice recognizer settings:**
 - **Language**
 - **Safe Search:** moderate-filter explicit images only, applies only to Google search by voice
 - **Block offensive words:** allows hiding recognized offensive voice results
- **Text-to-speech settings:**
 - **Listen to an example**
 - **Always use my settings:** default settings below override application settings
 - **Default Engine:** sets the speech synthesis engine to be used for spoken text (Pico TTS by default)
 - **Install voice data**
 - **Speech rate**
 - **Language**

ACCESSIBILITY

To set such settings as a display calibration and saving input text tap menu **Settings → Accessibility**:

- **Touch panel calibration**
- **Accesability:** applications TalkBack and KickBack are saving all input text.

DATE & TIME

This menu allows you to change data, time, time zone and display format: **Settings → Date & Time**:

- **Automatic:** uses network-provided values
- **Set date**
- **Select time zone**
- **Set time**
- **Use 24-hour format:** allows selecting 24 / 12 time format
- **Select date format:** allows selecting date format DD/MM/YY, MM/DD/YY, YY/MM/DD.

ABOUT DEVICE

Display the information about AP-801, such as product status, legal information, model number, firmware version, build number and so on tap menu **Settings** → **About phone**:

- **System updates**
- **Status**
- **Legal information**
- **Model number**
- **Android version**
- **Baseband version**
- **Kernel version**
- **Build number**

CHAPTER 4. TROUBLESHOOTING

If the device does not function as it is expected, please try the following steps

THE DEVICE IS NOT RESPONDING OR CAN'T BE TURNED ON

- Reset the device by pressing the reset button at the bottom. The device will be forced shutdown if it is on and you are required to restart the device again.
- Battery has been fully depleted. Please charge the device via USB or USB AC Adapter.

BATTERY LIFE SEEMS SHORT

- The operating temperature is below 5 °C. This is due to the characteristics of battery and not a malfunction.
- The battery is not used for prolonged period. Please recharge the battery of the device again
- The battery is not fully charged. Please charge the device for 5 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

THE DEVICE CAN NOT BE OPERATED DURING USB CONNECTION

- The device cannot be operated while it is connected to PC.
- Touch and hold the USB connection icon at status bar and drag downwards to display a Ongoing list, then select "Turn off USB storage" to resume operation.

ENG

TOUCH SCREEN PROBLEM

If the touch screen does not respond, use the Touch Panel Calibration function from Settings to calibrate the screen.

NO SOUND FROM EARPHONE

- Check if volume is set to '0'.
- Earphone may be broken, please change another one

BIG NOISE

- Check if there is dust in the earphone or speaker
- Check if the file is broken

FROZEN TO ANY OPERATION

Please use a pin to reset and then restart your tablet

APPLICATION NOT WORKABLE

- Possible reasons may be that this app is not compatible with your OS
- Downloaded *.apk file is broken so you may need to download a full version.

HOW DELETE A GOOGLE ACCOUNT?

If an account is added, the account is shown in submenu **Accounts & sync** → **Settings**, where you may also add another account. To delete an undesired account, go to **Settings** → **Privacy settings** → **Factory data reset**. Your tablet's internal storage, downloaded apps, etc. will also be deleted, except the info in your flash memory. Be careful before you carry out this operation

CHAPTER 5. ADDITIONS

MAINTENANCE

- If Tablet PC does get wet, turn off Tablet PC immediately. Wait for Tablet PC to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your Tablet PC in bag, keep Tablet PC in the protecting case supplied to avoid scratches
- If Tablet PC needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

PRODUCT SPECIFICATIONS

Display: 8" TFT capacitive touch screen, multi-touch, resolution 800*600 (4:3).

Wi-Fi: 802.11 b/g.

Operating System: Android 2.3

CPU: Rockchip 2918, 1 GHz, ARM Cortex A8

Storage memory:

- SDRAM: 512 MB
- Internal flash memory: 4 Gb (format FAT).
- Supports Micro SD card up to 16 Gb.

Camera: Built-in 0.3 MPics front camera

Supported formats:

audio: MP3, WMA, WAV, APE, FLAC, AAC, OGG

video: AVI, WMV, MP4, MKV, RM, RMVB, FLV, MOV, 3GP up to 1080P,
supports WebM VP8 decoding, slideshow

image: JPEG, BMP, GIF

text: ANSI/UNICODE TXT, PBD, PDF, Epub, FB2, HTML, etc.

Connectivity:

- Data transfer: USB 2.0 High Speed.
- Audio: earphone jack 3.5 mm
- Sound record: microphone
- Storage: Micro SD Card

Other:

- Flash player 10.2
- Multilingual user interface
- Built-in speaker
- G-sensor
- Energy-saving settings, adjustable brightness, automatic shut-off display
- Time / Date
- Battery indicator

Battery: 5000 mA/h

Charging:

- Power: DC 12.0V, 2.0A.
- Duration: 5 hours (approximately)

Physical properties:

- Size: 203 X 120 X 15.0 mm.
- Weight: 352.4 r.

Design and specifications are subject to change without prior Note.

CERTIFICATION INFORMATION**On FCC**

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

On CE

The symbol means that the unit complies with European safety and electrical interference directives.

ENG COPYRIGHTS AND TRADEMARK NOTE

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed

without vendor's permission except for personal use. All the brand and product names are trademarks of their respective companies.

DISPOSAL AND RECYCLING INFORMATION

Your Tablet PC must be disposed of properly according to local laws and regulations. Because this product contains a battery, the product must be disposed of separately from household waste. When your Tablet PC reaches its end of life, contact your local authorities to learn about recycling options.

BATTERY REPLACEMENT

The rechargeable battery in it should be replaced only by an authorized service provider. This symbol on the product or in the instruction means that your electrical or electric equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU, For more information, please contact the local authority or your retailer where you purchased the product



EXPLANATORY AMENDMENT

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under continuously upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.

Печать магазина

Shop Stamp



A large rectangular box intended for a shop stamp. A large, light gray diagonal watermark reading "ASSISTANT" is visible across the entire page.

Дата продажу

Day of sale



A rectangular box intended for the day of sale. A large, light gray diagonal watermark reading "ASSISTANT" is visible across the entire page.

Номер моделі

 
Model number



A rectangular box intended for the model number. A large, light gray diagonal watermark reading "ASSISTANT" is visible across the entire page.

Гарантійний термін

Warranty period

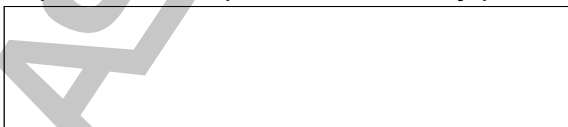

A rectangular box intended for the warranty period. A large, light gray diagonal watermark reading "ASSISTANT" is visible across the entire page.

TIWELL ASSISTANT LLC

<http://www.tiwell.com>

Made in China